


INSTRUCTION

STEP Pedometer

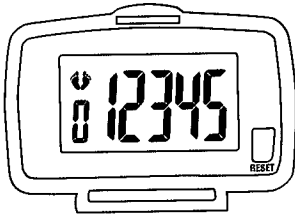

FEATURES

1. Records number of steps taken to 999,999 steps
2. Memory storage of daily and cumulative steps
3. Larger easy-to-read display
4. Flips down for easy viewing while on waist
5. Auto power ON/OFF

• Auto Filter Sensor:

5 steps movement sensor filters out irregular results and activates only after 5 or more steps.

• Delayed Reset Button:

This is to prevent accidentally erasing the records on the display.

• Accurate Pendulum Movement:

The pedometer is controlled by an internal pendulum that moves down with each step that you take and springs up again.

TO OPEN THE PEDOMETER

1. To open the lid is to monitor the records you exercised.
2. To work properly, pedometer case must be closed.

TO OPERATE THE PEDOMETER

1. Press the RESET button for 2 seconds. The display will show 000000.
2. Start walking or running. The display registers the number of steps taken to 999,999 steps (excluding irregular movements).



TO RESET THE PEDOMETER

1. Press the RESET button for 2 seconds.
2. The digit will show 000000 on display.

AUTO POWER ON/OFF


1. The display will blank when no activity has been detected for 4 minutes.
2. Press button or walk 5 steps to power ON the unit.

AUTO MOVEMENT SENSOR

1. To filter out random movements, the unit remains in standby mode until five (5) continuous steps are registered. Only then are the 5 steps calculated in, and an Active indicator "  " appears on the upper left of display.
2. When regular walk/run movement stops, after 2 seconds the timer pauses and the unit switches to standby status (Active indicator "  " disappears).

TO POSITION THE PEDOMETER

1. Clip the unit to your belt or to the top of your shorts, trousers or slacks as close to your hip as possible.
2. The unit is vertical to the ground as this will aid in proper function and make the display easy to read.

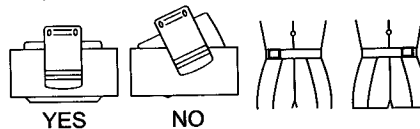

BATTERY REPLACEMENT

1. Insert a coin and open the unit lid on the bottom of the body.
2. Remove and replace battery with LR44 or equivalent.
3. Make sure that the "+" side is up.
4. Pedometer is not waterproof. Keep away from any liquid.
5. Treat it carefully. Do not drop it or expose it to shock.

MADE IN TAIWAN